

# MANUALLY PROGRAM AnyTone AT-778UV Channels

1. [P2] the radio into VFO mode
2. Press the channel select knob
3. Use keypad to enter RECEIVE frequency
4. Set the OFFSET by pressing [FUNC]
  - [P2]-SFT to set to SHIFT frequency
  - [P2]-SFT again to set "+", "-", or "NO OFFSET"
  - Press [FUNC] to save.
5. To set CDC tones:
  - [FUNC] P5-[CDT]
  - P5-[CDT] again to toggle between TCDT (transmit), RCDT (receive), or OFF
  - Rotate channel select knob to 'CTC' from "OFF"
  - Press channel select knob
  - Rotate channel select knob to toggle between "OFF" and CTCSS codes
  - Press [FUNC] to save.
6. To STORE:
  - Long-press P2-[V/M] and channel number will flash
  - Turn dial to select channel for saving
    - o **RED** means this channel is already programmed
    - o **GREEN** means channel is currently empty
  - Long-press P2-[V/M] to SAVE
  - Short-press P2-[V/M] to return to MEMORY CHANNEL mode.
7. To NAME the channel:
  - Long-press the [FUNC]
  - Rotate channel select knob to "[2] CHAN MENU"
  - Press channel select knob
  - Rotate channel select knob to "[11] NAME SET"
  - Press channel select knob
  - Rotate channel select knob to scroll through letters
  - Press channel select knob to move to next character
  - P3-[Back] a number of times to back out of CHAN MENU.